


3
min.


Led UV Disinfection Bag

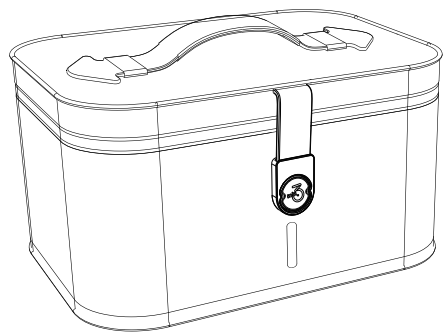

XD-01
Model Number


Product description

It is a storage bag with disinfection function.
The sterilization rate is 99.9% by LED UV disinfection
and takes care of your health !

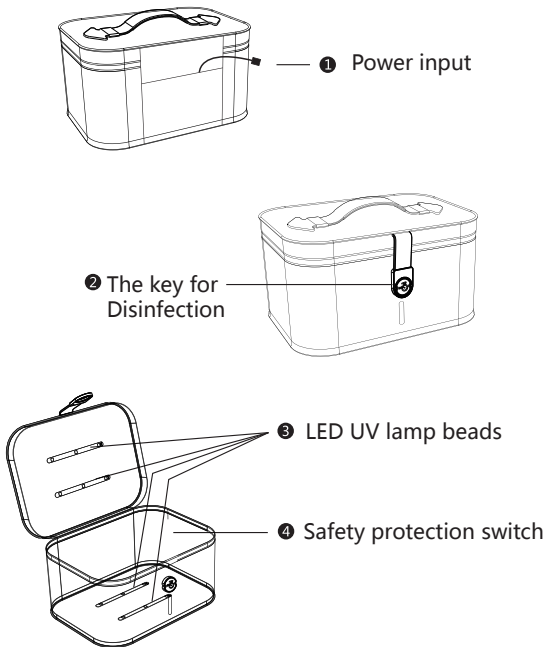


Steps for usage

1. Open the Zipper and put the bracket in ;

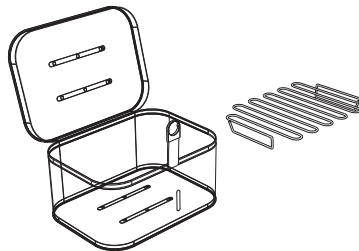


2. Put items on the stand (The items have to keep dry),
lay the items flat on it ;

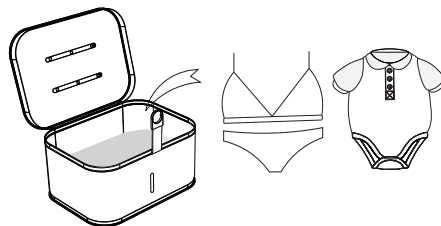


Steps for usage


3. Pull up the zipper, close the safety
protection switch, and connect
the power ;

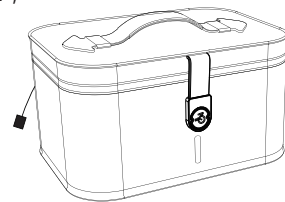

4. Press the disinfection button lightly to start the
disinfection function (the button light is on);

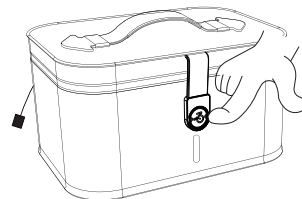

5. After disinfection is complete, it will
automatically shut down .Then you can take the items out.

 Warning: Do not irradiate eyes and skin

Scope of application

This item is suitable for disinfecting the surface of articles, such as intimate clothes, phone, makeup tools, baby clothes, etc.

Safety protection

The product contains a special safety design. The safety protection switch is turned on and the disinfection light source is automatically turned off.

Sterilization principle

Through the deep ultraviolet of the LED, the DNA or RNA molecular structure of the bacteria is destroyed, so as to achieve the purpose of disinfection.

Description of indicator light

Serial number	state	Indicator light
①	Disinfection state	Lamp long bright
②	Disinfection completed	Lamp off

Note: If the item is no in use, it will turn off itself after 3mins and Enter sleep mode. Then click the disinfection key to enter standby mode.




Technical parameter

1. Product Name: LED ultraviolet disinfection bag
2. Product model: XD-01
3. Rated input: 5V= 2A
4. Size: 245x200x170mm
5. Net weight: 500g
6. Led wavelength: 260-280nm
7. Input interface: Type-C
8. Lamp life: About 10000 hours
9. Temperature: working temperature (0 ~ 40 °C); storage temperature (- 20 ~ 55 °C)

Packing list

- ① Disinfection bag X 1
- ② Bracket X 1
- ③ Certificate X 1
- ④ Instructions X 1

Product characteristics

-  One button disinfection
-  Led ultraviolet light can kill almost all bacteria
-  Led deep UV sterilization, no mercury, no ozone

-  Do not allow children to touch
-  Do not step
-  Do not irradiate eyes and skin
-  Do not wash and soak

Reminder

1. Before disinfection, please make sure to zip up and fasten the safety protection switch.
2. After the product is powered on, click the disinfection key to activate it.
3. Do not close to the strong magnet .
4. Please read the manual carefully and keep it properly.

- In order to improve the product performance, the product function will be a little changed during production.

Led UV Disinfection Bag

Sterilization rate 99.99% Safe and radiation free

min. 3

Suitable for disinfection

• Underwear, underpants • Baby clothes and toys • Makeup tools • Phone